

Limited Warranty

To the consumer, Privacy Technologies, Inc. warrants this TeleZapper™ to be free of defects in material or workmanship commencing upon the date of the original purchase. Refer to your TeleZapper™ carton for the length of warranty and save your original receipt to validate start of warranty period.

If the TeleZapper™ should become defective within the warranty period, we will repair or replace any defective parts free of charge. Please call Customer Service at **1-800-373-6290** for assistance.

This warranty does not cover unauthorized repairs. This warranty gives you specific legal rights and you may also have other rights. (Other rights may vary from state to state in the USA.)

FCC Part 68 Required User Manual Information

This equipment complies with Part 68 of the FCC rules. Located on the equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN). If requested, this information must be provided to the telephone company. The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum RENs for the calling area. This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact:

Privacy Technologies • 7005 Cochran Rd. • Glenwillow, OH 44139
Phone 1-800-373-6290

If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved. This equipment uses the following USOC jacks: RJ11C. It is recommended that the customer install an AC surge suppressor in the AC outlet to which this device is connected. This is to avoid damaging the equipment caused by local lightning strikes and other electrical surges.


Disclosure required by the Federal Communications Commission

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Keeps Telemarketers Out!

TELEZAPPER™

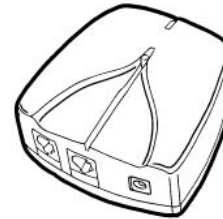

Installation and User's Guide

Get Rid of Telemarketers with the TeleZapper™!

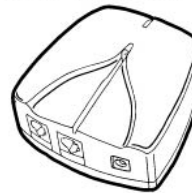

The **TeleZapper™** is a patented device that helps you eliminate those annoying telemarketers who call you at all times of the day and night.

- The TeleZapper™ is easy to install.
- The TeleZapper™ covers all of the telephones and answering machines on one phone line in your home.
- Whenever you or your answering machine answers a call, a special tone is played into the telephone line.
- The tone tells the telemarketer's predictive dialing computer to take your number off the list because the computer thinks that your number is "disconnected."
- When it hears the tone, the telemarketer's computer immediately hangs up and removes your phone number from their list of numbers to call again! And your number won't be sold to other telemarketers either!
- Other than hearing the tone when you pick up your telephone, the TeleZapper™ has no other effect on the operation of your telephones, answering machines, or other services like Caller ID or Call Waiting.
- When you use the TeleZapper™, you'll notice that you get quite a few "hangups" where no one is there when you answer your telephone. Most of the time, this means you've "zapped" a telemarketer! Over a period of a few weeks, you'll notice that you are receiving fewer and fewer annoying telemarketing calls. It works!
- For even more effective screening, let your answering machine pick up.

TROUBLESHOOTING GUIDE

WARNING: TO REDUCE RISK OF PERSONAL INJURY—UNPLUG BEFORE SERVICING

Problem	Possible Reasons	Possible Solutions
Can't hear TeleZapper™ tone when I pick up the phone.	1. Phone cord is not firmly plugged into the telephone jack or the TeleZapper™ 2. Power cord not firmly plugged into outlet or TeleZapper™ 3. TeleZapper™ is not connected directly to the wall jack. 4. TeleZapper™ is not connected to the correct phone line. 5. TeleZapper™ is not connected to an active telephone jack. 6. Needs service.	1. Disconnect and reconnect telephone cord firmly into the wall jack and the TeleZapper™. 2. Disconnect and reconnect power cord firmly into the outlet and the TeleZapper™. 3. Confirm that the TeleZapper™ is connected as shown in the installation diagrams. 4. Make sure that the TeleZapper™ is connected to a wall jack that is on the same phone line as the phone you are using. 5. Connect the TeleZapper™ to an active telephone jack. 6. Call customer service at 1-800-373-6290
My phone won't ring when the TeleZapper™ is connected.	1. Phone cord is not firmly plugged into the phone from the TeleZapper™. 2. Phone cord from the wall jack is not firmly plugged in. 3. Power cord is not firmly plugged in. 4. TeleZapper™ is not plugged directly into the wall jack.	1. Disconnect and reconnect telephone cord firmly into the phone and the TeleZapper™. 2. Disconnect and reconnect telephone firmly into wall jack and the TeleZapper™. 3. Disconnect and reconnect power cord firmly into the outlet and the TeleZapper™. 4. Confirm that the TeleZapper™ is connected as shown in the installation diagrams.

Installation Instructions


Find the picture that best matches the way you are going to plug in your **TeleZapper™**. Then, follow that picture to hook up your **TeleZapper™**.

Please note; one (1) six-foot cord is included. Additional cords are

Option 1


TeleZapper™ only.

The TeleZapper™ does not have to be plugged into a phone for it to work on that line. Therefore, you can plug it into any unused phone jack and power outlet in the house and it will work on all phones connected to that line (phone #).

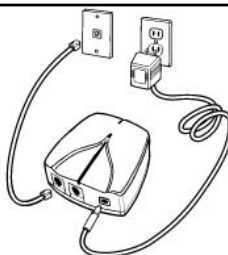


Option 2

Phone only

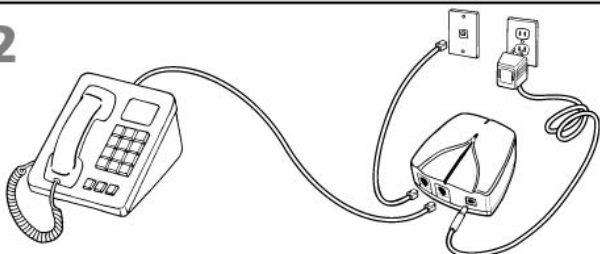


Option 3

Phone and answering machine. Re-record your answering machine message. Wait at least 2 seconds before saying anything on your message so the TeleZapper™ can work when the phone is answered by your answering machine.

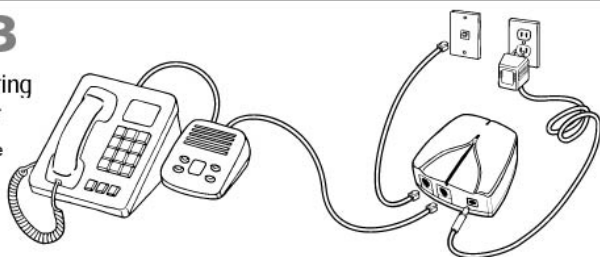


Option 4

Phone and caller ID

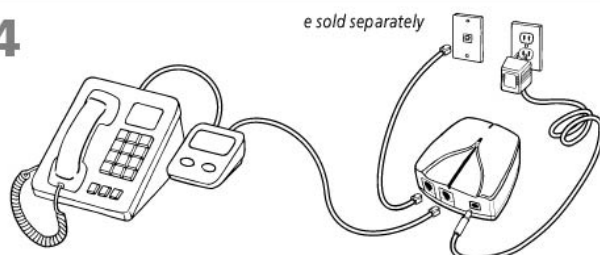

Option 5

Phone and answering machine and caller ID. Re-record your answering machine message. Wait at least 2 seconds before saying anything on your message so the TeleZapper™ can work when the phone is answered by your answering machine.

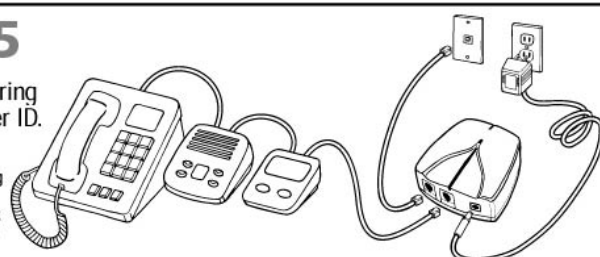

TeleZapper™ Q&A

Q. How does the TeleZapper™ work?

A. • When the phone is picked up, the TeleZapper™ plays a tone, which tells the telemarketer's predictive dialer computer that the number has been disconnected.
• The telemarketer's computer then takes your number off of the list – forever! And your number will not be sold to other telemarketing companies.
• The TeleZapper™ only "zaps" computerized calling systems that are set to detect disconnected numbers. This includes virtually all random telemarketers.
• It will not "zap" bill collectors or other companies who dial your phone number directly and not through a telemarketing computer.
• People using the TeleZapper™ typically see an 80% or higher reduction in calls with many reporting close to a 100% reduction of telemarketing calls since you are being taken off of telemarketers' lists.

Q. How do I know when I've "zapped" someone?

A. If you answer your telephone and there's no one there, the odds are excellent that you just got one. Quite often you'll see the caller ID from such a call is "unavailable". After about a month, you'll notice that you receive fewer and fewer of these calls.

Q. Do I need one for each telephone or telephone jack in my house?

A. No. The unit covers ALL telephones connected to the same line (telephone number). If you have two lines, you will need an additional unit for your other line.

Q. Will it interfere with my computer or fax machine?

A. No. It plays the tone briefly when the line is answered, then goes to "sleep" waiting for the next call.

Q. Will it interfere with my answering machine?

A. This is the best way to use the TeleZapper™. Let your answering machine pick up the line, the TeleZapper™ zaps the telemarketer, and you were not bothered at all! You will need to delay your message for about 2 seconds to allow the tone to play. Again, it will not affect normal calls (although they will hear the brief tone).

Q. I have voicemail from the telephone company. Will it work with this?

A. Voicemail works by forwarding your calls to a central location. In order for the TeleZapper™ to work, the phone in your home must be picked up. So, the TeleZapper™ will work if you are at home and you answer a telemarketing call, but if the call goes to voice mail, the TeleZapper™ will not activate.

For any additional questions please feel free to look at our website at www.telezapper.com or contact us toll free at 1-800-373-6290 or at Privacy Technologies • 7005 Cochran Rd. Glenwillow, OH 44139

INSTALLATION:

Your TeleZapper™ can be installed to an existing telephone jack and an existing phone. However, if you decide to install a new telephone jack for this product please follow these precautions:

1. Never install telephone wiring during a lightning storm
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS INCLUDING THE FOLLOWING:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

4. Only use the power supply that was packaged with the product.
5. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
6. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
7. This product should never be placed near or over a radiator or heat register.
8. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your local power company.
9. Do not allow anything to rest on the power cord. Do not place this product where the cord will be abused by persons stepping on it.
10. Do not overload wall outlets and extension cords as this can result in fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product but take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e. If the product has been dropped or the outer housing damaged.
 - f. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Use only with 12V DC 500mA power supply provided with the unit. To order replacement power supply, call customer service at 1-800-373-6290.

SAVE THESE INSTRUCTIONS.